

## **COAST LUXURY APARTMENTS – COAST 24**

### **INSTRUCTIONS FOR SMEG DISHWASHER**

1. Rinse food scraps from plates & bowls before stacking

2. Stack baskets correctly

Upper basket — light items only

Glasses, small plates, cups, shallow bowls and plastics

Lower basket - heavier items

Large plates, bowls and cutlery

Ensure spray arms can rotate freely without obstruction

3. Add detergent to dispenser — inside door, left hand side

4. Start the dishwasher

Ensure door is securely closed

Press the On/Off button — large button far left

Press Program button, marked P, several times until light comes on for program required.

Suggested program — Normal Wash (4<sup>th</sup> button from left)

5. To start the program

Press Start/Pause button >/II (far right) and hold for a few seconds until selected program light flashes and confirmation beep is heard.

6. The 2 lights on show the end of the cycle. Empty the unit at the end of the cycle. Thank you.

## **COAST LUXURY APARTMENTS – COAST 24**

### **INSTRUCTIONS FOR GAS COOKING HOB**

Ignition of burners

Cooktop is fitted with electronic ignition.

1. Press and turn knob simultaneously counter- clockwise (away from you)

# **Instructions for Panasonic Micro HiFi (SC-PMX9DB)**

## **iPod DOCK**

**iPod DOCK (on the top of the unit)**

**Lightning connector**

**Compatible iPod/iPhone/iPad**

- **iPod touch (5th generation)**
- **iPod nano (7th generation)**
- **iPhone 5**

## **iPad Port (USB Port)**

**Compatible with “iPod\_Port” connection (front USB Connection)**

**[Using a USB cable]**

- **iPod touch (1st, 2nd, 3rd, 4th, and 5th generation)**
- **iPod nano (2nd, 3rd, 4th, 5th, 6th, and 7th generation)**
- **iPhone 5 / iPhone 4S / iPhone 4 / iPhone 3GS /**
- **iPhone 3G / iPhone**
- **iPad (3rd, and 4th generation) / iPad 2 / iPad**
- **iPad mini**

*Do not connect the following models. Unexpected behaviour may occur:-*

- *iPod classic*
- *iPod [4th (colour display), and 5th (video) generation],*
- *iPod nano (1st generation)*

## **Bluetooth**

### **Pairing a new device**

**1 Turn on the Bluetooth® feature of the device** and place the device near this system. If this system is already connected to a Bluetooth® device, disconnect it.

**2 Press [SELECTOR] repeatedly to select “BLUETOOTH”.**

If “Pairing” is indicated on the display, go to step 3.

**3 Press [PLAY MENU] on remote to select “New Device” and then press [OK].**

“Pairing” is indicated on the display.

**4 Select “SC-PMX9” from the Bluetooth® device’s Bluetooth® menu.**

**5 Start play on the Bluetooth® device.**

**Note:**

- If prompted for the passkey, input “0000”.
- You can register up to 8 devices with this system. If a 9<sup>th</sup> device is paired, the device that has not been used for the longest time will be replaced.

### **Connecting a Paired Device**

**1** Turn on the Bluetooth® feature of the device and place the device near the speakers. If this system is already connected to a Bluetooth® device, disconnect it.

**2 Press [SELECTOR] repeatedly to select “BLUETOOTH”.**

“Ready” is indicated on the display.

**3 Select “SC-PMX9” from the Bluetooth® device’s Bluetooth® menu.**

The name of the connected device is indicated on the display for 2 seconds.

**4 Start play on the Bluetooth® device.**

**Note:**

- This system can only be connected to one device at a time.
- When “BLUETOOTH” is selected as the source, this system will automatically try and connect to the last connected Bluetooth® device.
- The Bluetooth® device will be disconnected if a different audio source (e.g., “CD”) is selected.

### **Disconnecting a Paired Device**

**1 While a Bluetooth® device is connected press [PLAY MENU] on the remote to select “Disconnect?”**

**2 Press [2, 1] to select “OK? Yes” and then press [OK].**



